




TerraTrike[®]

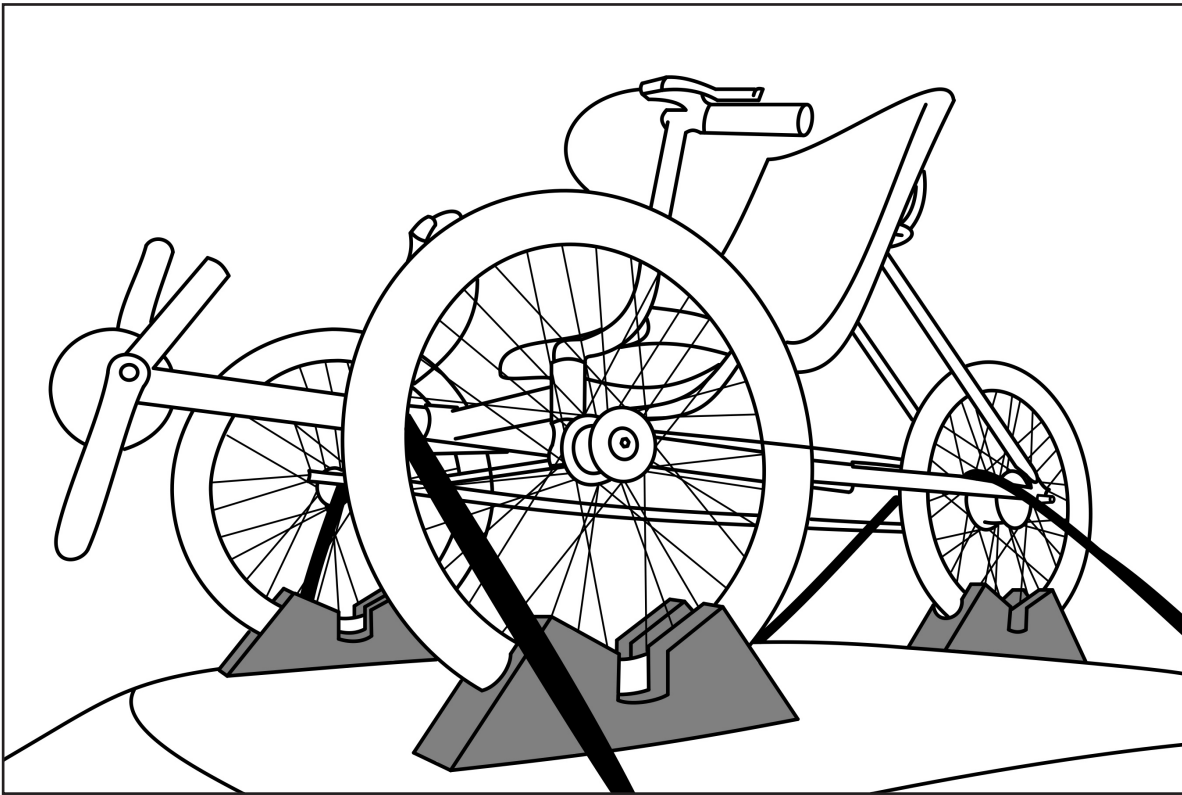

Universal Trike Carrier (UTC) Installation & User Manual

INCLUDED:

- Carrying Bag with handles (x1)
- Universal Trike Block with anti-skid backing (x3)
- Heavy Duty Strap (x2)
- Frame Strap Pad with anti-slip backing (x2)


PLEASE READ PRIOR TO INSTALLATION:

It is imperative that the trike is properly and securely attached to your vehicle. Improper attachment could result in an automobile accident, and could cause serious bodily injury or death to you or to others. You are responsible for securing the trike to your car, checking the attachments prior to use, and periodically inspecting the blocks and straps for adjustment, wear and damage. Therefore, you must read and understand all of the instructions and cautions supplied with your TerraTrike Universal Trike Carrier prior to installation or use. If you do not understand all of the instructions and cautions, or if you are not confident in your ability to properly use this product, consult a professional.


Ensure bottoms of blocks and area of roof under blocks are clean and free of debris. Failure to do so could lead to scratches in roof and reduced grip of the block to the roof requiring increased and undue pressure on trike, roof and straps. Park vehicle on level ground.

WIZWHEELZ IS NOT RESPONSIBLE FOR ANY DAMAGE.


- 1 For trike models equipped with a Fixed Seat, loosen and remove the Fixed Seat Bolt using an 8mm allen wrench. For models equipped with a Sliding or EZ seat clamp, loosen and remove M8 bolts from the seat mounting tabs using an 8mm allen wrench. For Rover models, loosen and remove the seat clamp Quick Release and Shims. Next, remove the seat stay pins and disconnect the seat. Using a 4mm allen wrench and 10mm open ended wrench, remove the lower seat stays from the frame of the trike. (Lower seat stays may be left on if strapped to the frame to prevent movement during transport.)

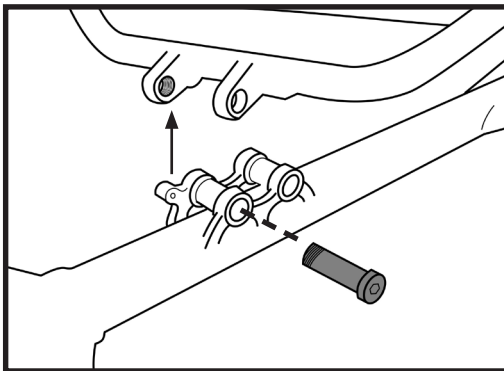

Fixed Seat Bolt

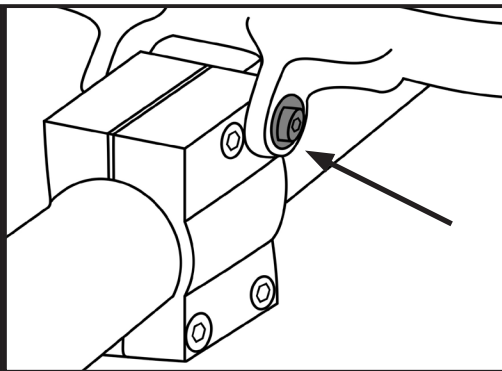


Sliding/EZ Seat Clamp

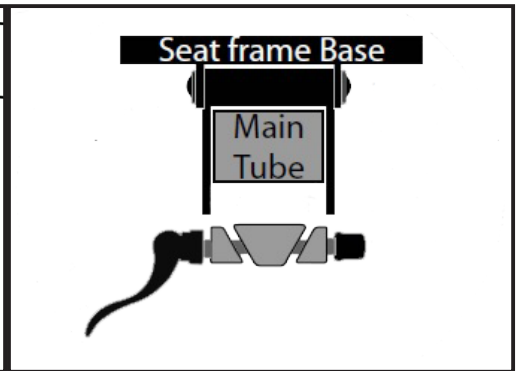


Rover Seat Clamp

- 2** Slide the blocks onto all three tires. Place the trike onto the roof of the vehicle. Adjust placement if necessary to ensure clearance of objects on the roof such as a sunroof, existing roof rack or antenna. Once the trike is positioned, lock the parking brakes.

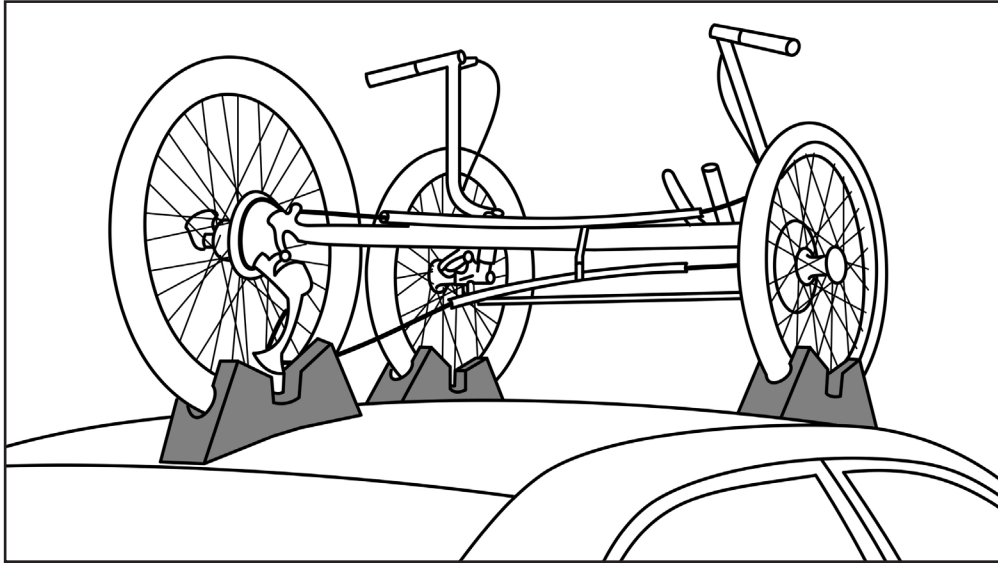


- 3** Run a strap through the vehicle's front door frames and over top of the trike. Do the same through the rear door frames. Two straps are included for distributing pressure and maximizing grip to the roof. Depress the camming portion of the buckle and push the loose end of the strap, from the bottom, through the opening in the buckle. Pull the loose end of the strap to adjust tension. Putting a twist in the strap on the outside of the vehicle will help reduce wind vibration. Ensure the straps are not interfering or putting pressure on the spokes, chain, or cables. Reposition wheels if necessary.

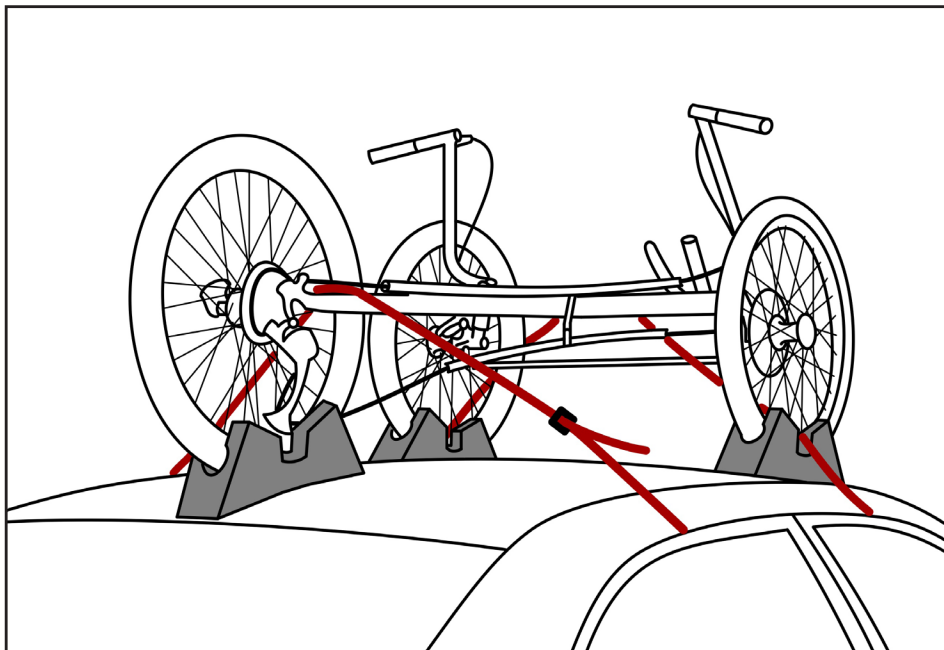

4

Note: Slide Anti-slip Frame Pad onto straps and position on trike for added protection. Periodically check straps during travel, especially in wet weather and tighten if necessary.

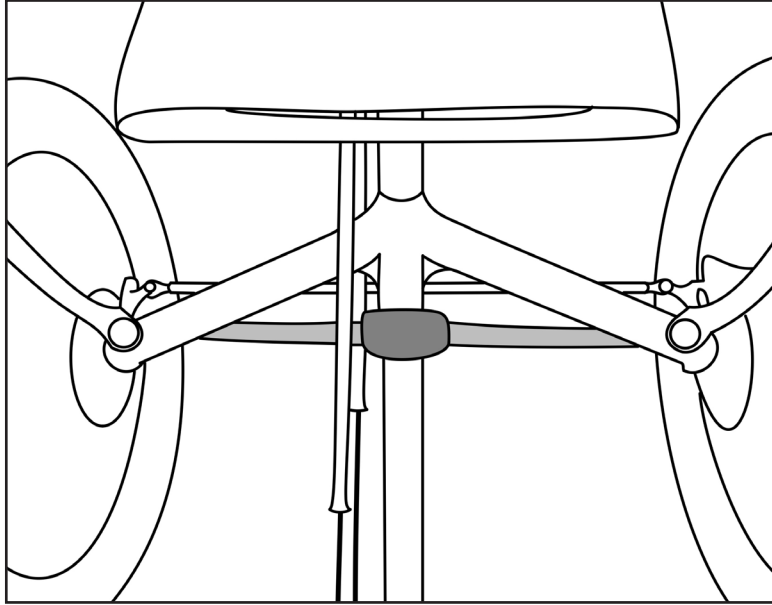

Final Checklist:

- Ensure the strap running through the vehicle does not interfere with driving or passengers inside of vehicle.
- Apply even pressure to front and rear straps and **DO NOT OVERTIGHTEN!**
- Check for trike movement and adjust strap pressure accordingly.
- Bind up and tie off any excess strapping material.
- Periodically check straps during travel and tighten if necessary.
- Replace straps if they become worn or frayed.
- Be considerate of weight limits for the vehicle's roof.



TerraTrike®

800.945.9910 | www.TerraTrike.com
4460 40th St. SE | Grand Rapids, MI 49512 USA

