


# TerraTrike 26" Deluxe Rear Fender Installation Manual

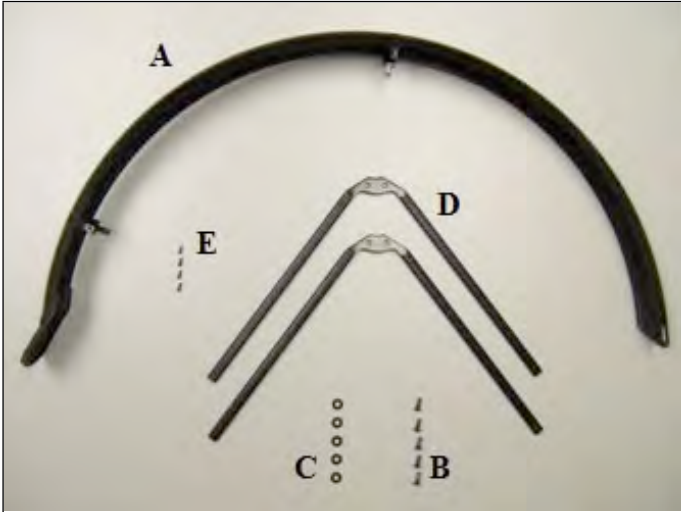

- Parts List:  
 A – Rear Fender  
 B – 5 M5x12 bolts  
 C – 5 M5 Flat Washers  
 D – 2 Rear Fender Stay Assemblies  
 E – 4 M3x8mm Bolts

**Step 1: Attach rear fender stay to frame (Rover shown).**



Remove rear wheel and install both rear assemblies. Some rear fender setups will only require one M5 bolt per dropout. **If you're not familiar with removing and reinstalling your rear wheel, please take your trike to a certified bike shop for fender installation.**

**Step 2: Attach Fender to back of frame.**



Use 1 M5 bolt and washer.

**Step 3: Replace wheel in frame**



**Step 4: Attach Fender to stays using M3 bolts.**



**DO NOT OVER TIGHTEN**

## Path/Cruiser/Tour Rear Fender Installation

**Step 1:**



Use both mounting locations to bolt fender stays to frame w/ M5x12 bolts.

**Step 2:**



Use metal clip and an M5x12 bolt to fasten fender to frame or fasten fender directly to frame.

**ATTENTION SPORT OWNERS: You will need to remove and reinstall your seat stay support to the inside of the chain stay dropouts before installing your rear fender stays.**