


TerraTrike® VersaBars Installation

Tools Required: 4mm allen wrench, 3mm allen wrench (for accessory mounts)

Step 1. Identify left side VersaBar and right side VersaBar.

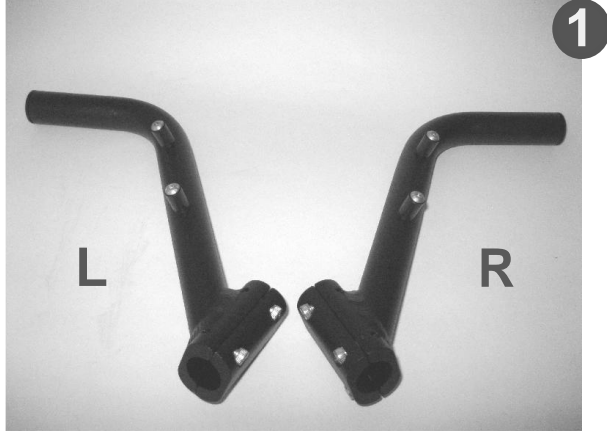

Step 3. Align VersaBars so that they are pointed forward and parallel to the wheels.



Step 2. Remove bolts with 4mm wrench and install onto handlebar. Lightly tighten all bolts equally.



Step 4. Check to ensure VersaBars are adjusted at equal heights, then fully tighten bolts.

Step 5. Install accessories onto mounts using 3mm wrench or mount accessories directly to VersaBars.



*VersaBars are designed as an entry/exit assist on direct steer handlebars only. Do not bear full weight. VersaBars can hold lights, mirrors, cycle computers, mini pumps, and more . . . get creative!