


TerraTrike Fender Installation Manual

Provided Parts

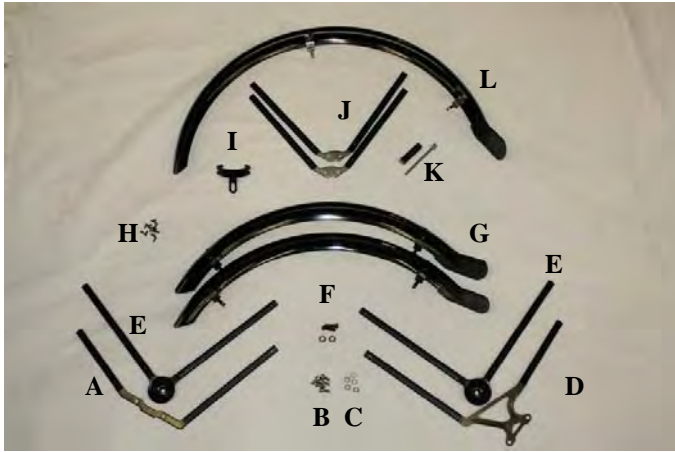

Parts List:

A – 1 Left stay assembly	H – 12 M3x8 bolts
B – 5 M5x12 bolts	I – 1 Rear fender clip
C – 5 M5 Flat Washers	J – 2 Rear Fender Stay assemblies
D – 1 Right stay assembly	K – 1 Rear Fender Stand-off and M5x65
E – 2 Outer fender stay assembly	L – Rear fender
F – 2 M6x20 bolts w/ 2 M6 Flat Washers	
G – 2 Front Fenders	

Step 1, all models:



Remove brake calipers and discard washers.

Step 2, all models:



Install inner support stay assembly (left hand side) and reattach brake caliper

Step 2, all models, cont.:



Install inner support stay assembly (Right hand side) and reattach brake caliper

Step 3, all models:



Install outer fender stay assemblies w/ M6x20 bolts and M6 flat washers.

Step 4, all models:



Install front fenders. **DON'T OVER TIGHTEN!**

Repeat this step after rear fender stay assemblies are installed.

Step 5, Rover:



Remove rear wheel and install both rear assemblies. Some rear fender setups will only require one M5x12 bolt per dropout. **If you're not familiar with removing your rear wheel, please take your trike to a certified bike shop for fender installation.**

Step 6: (FOR ROVER WITH 20" REAR WHEEL)

Step 6: (For Zoomer and Tandem)



Install stand-off tube with M5x65 bolt.



Use metal clip and an M5x12 bolt to fasten fender to frame or fasten fender directly to frame.

Path/Cruiser/Tour Rear Fender Installation

Step 1:



Use both mounting locations to bolt fender stays to frame w/ M5x12 bolts.

Step 2:



Use metal clip and an M5x12 bolt to fasten fender to frame or fasten fender directly to frame.

Sport Rear Wheel Setup

Step 1:



Detach the rear seat stays and reattach them to the inside of the drop outs (Step 2) w/ M5x12 bolt.

Step 2:



This gives sufficient clearance for the fender stays.

Step 3:



Install rear fender in forward mounting bracket hole with M5x12.

Step 4:



Use metal clip and an M5x12 bolt to fasten fender to frame or fasten fender directly to frame.