


TerraTrike 26" Deluxe Rear Fender Installation Manual

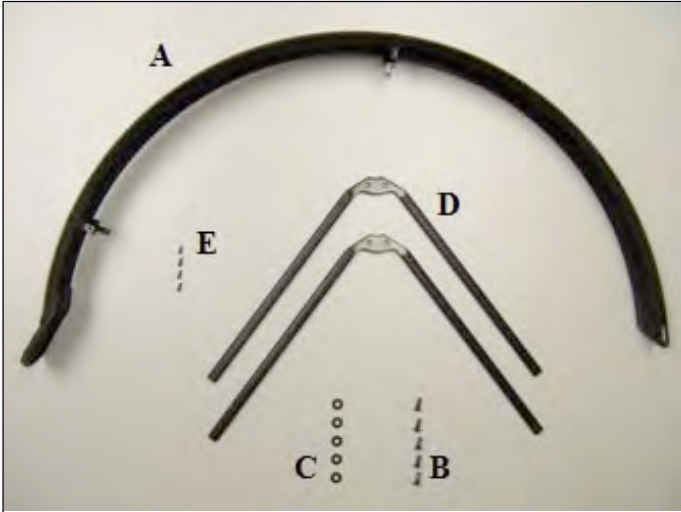

Parts List:

- A – Rear Fender
- B – 5 M5x12 bolts
- C – 5 M5 Flat Washers
- D – 2 Rear Fender Stay Assemblies
- E – 4 M3x8mm Bolts

Step 1: Attach rear fender stay to frame (Rover shown).



Remove rear wheel and install both rear assemblies. Some rear fender setups will only require one M5 bolt per dropout. **If you're not familiar with removing and reinstalling your rear wheel, please take your trike to a certified bike shop for fender installation.**

Step 2: Attach Fender to back of frame.



Use 1 M5 bolt and washer.

Step 3: Replace wheel in frame



Step 4: Attach Fender to stays using M3 bolts.



DO NOT OVER TIGHTEN

Path/Cruiser/Tour Rear Fender Installation

Step 1:



Use both mounting locations to bolt fender stays to frame w/ M5x12 bolts.

Step 2:



Use metal clip and an M5x12 bolt to fasten fender to frame or fasten fender directly to frame.

ATTENTION SPORT OWNERS: You will need to remove and reinstall your seat stay support to the inside of the chain stay dropouts before installing your rear fender stays.