


TerraTrike®

Headrest Assembly Instructions

Thank you for purchasing the TerraTrike Headrest. To install the headrest you will need two 5mm allen wrenches and one 4mm allen wrench.

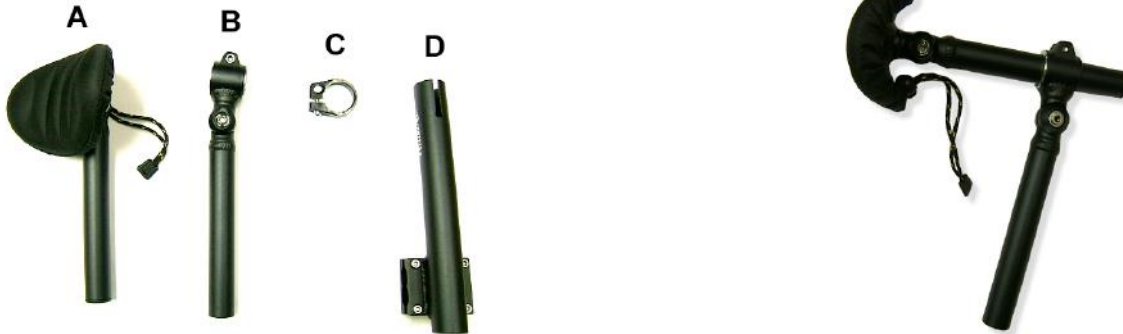

Step one: Slide parts A and B together by inserting A into B with Part B having the silver sleeve's collar facing the pad. Tighten bolt to keep the assembly from moving during the ensuing steps.



Step two: Slide collar C onto part D.

Step three: Slide upper part (A&B) into lower part (C&D) and tighten part C to keep it from moving.



Step four: Attach headrest to the back of the seat with clamp using the four bolts.

Step five: Adjust headrest to a comfortable position and tighten all fasteners securely.