



Tools Needed:

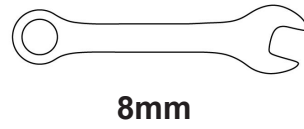

Parts Included:

Traveler Plate Spacer



M5 Washer



M5x12




Traveler Bottom Bracket M5 Nyloc Nut



Assembly Instructions:

- 1 Combine Traveler adapter parts with Boost Kit as shown

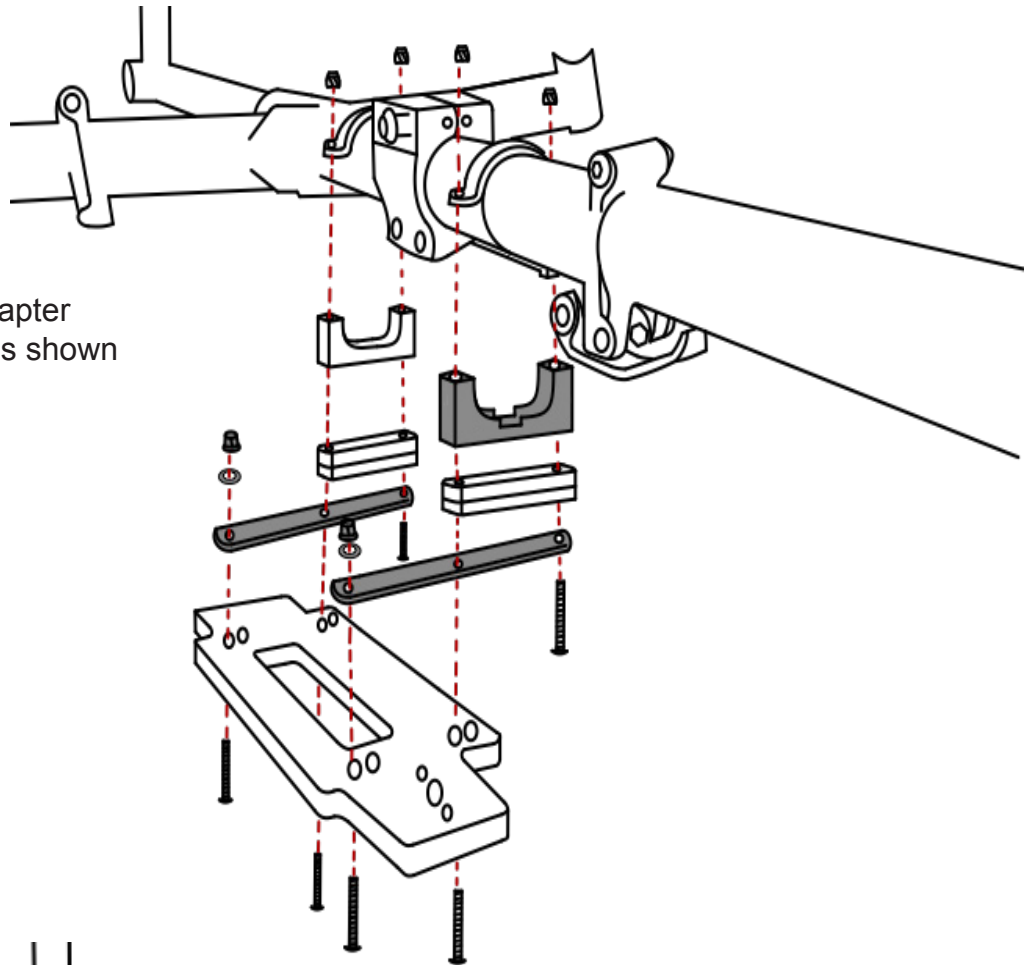

- 2 Complete assembly as displayed here

