



TerraTrike® Rear Fender Installation

- A - 1 Rear Fender
- B - 2 Fender Stay Sets w/ 4 Fender Stays
- C - 1 Rear Fender Support
- D - 5 M5x12 Mounting Bolts w/ 5 M5 Washers
- E - 8 M3x8 Fender Stay Bolts
- F - 50mm and 30mm Spacers, 60mm and 90mm Bolts

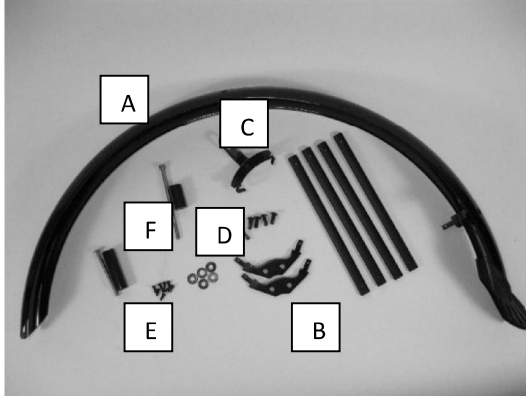

Step 1: Assemble the 2 fender stay sets using the M3x8 bolts. Ensure these bolts are tight, but do not over tighten.

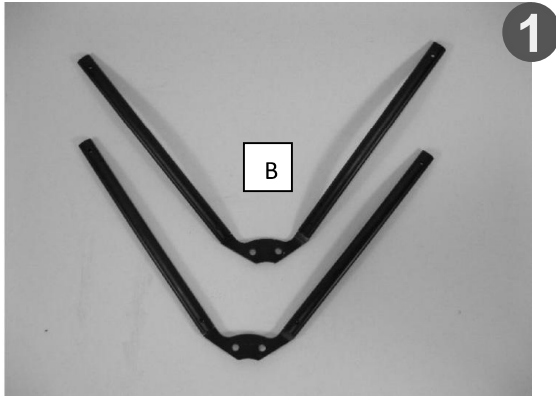

Step 2: Install the assembled fender stays on the trike using 4 M5x12 bolts and M5 washers. Some trikes only require 2 bolts.



Step 3 (Rover only): Remove rear wheel. Install the rear fender support using the M5x60 bolt, and 50mm spacer.



Note: If you are not familiar with removing and reinstalling your rear wheel, visit your local bike and/or trike shop for installation

Step 3 (Rambler, Traveler only): Remove rear wheel. Install the rear fender support using the M5x90 bolt, and 50mm and 30mm spacers.



Step 3 (Tandem, Sportster, Tour II only): Remove rear wheel. Install the rear fender support directly to the frame using a M5x12 bolt and washer.



Step 4: Insert the rear fender into the fender support and crimp tabs to secure.



Step 5: Reinstall the rear wheel. Install the rear fender using 4 M3x8 bolts. Check tire clearance and tighten all bolts.

