


Remove boom clamp fasteners and insert Marrs Tab. Reinstall boom clamp fasteners.
NOTE: Orientation of the Marrs Tab varies depending on boom clamp fastener type (bolt vs. QR lever). Refer to drawings below for proper installation.

Boom clamp bolts:

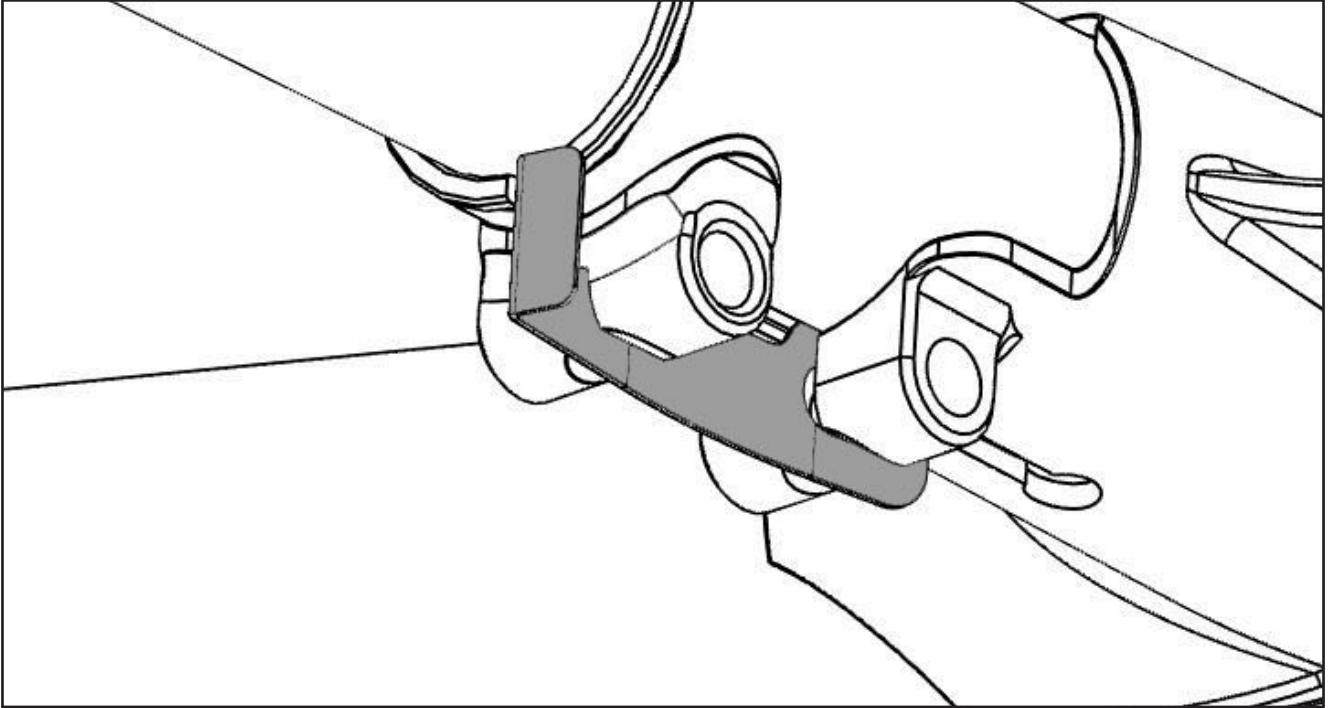

Boom clamp QR's:

