


**Tools Needed:** 2.5mm allen wrench

### Assembly Instructions:

Wheel Alignment Tool can be used with or without tube supports (3) and (4). To install tube supports, loosen M5 set screws (6) using a 2.5mm allen wrench. Slide Male Tube Support (4) onto Male Aligner Tube (2) and tighten set screw. Repeat the process for the Female Tube Support (3) and Female Aligner Tube (1).

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TT000910	Wheel Aligner Female Tube	1
2	TT000911	Wheel Aligner Male Tube	1
3	TT000912	Wheel Aligner Female Tube Support	1
4	TT000913	Wheel Aligner Male Tube Support	1
5	TT600929	Seat Stay Collar	1
6	WH000039	M5x0.8 X 14mmL Cup Point Set Screw SS	2
7	WH000040	Plug, 18mmID X 19mmOD	1
8	WH000041	Plug, 20mmID X 22mmOD	1

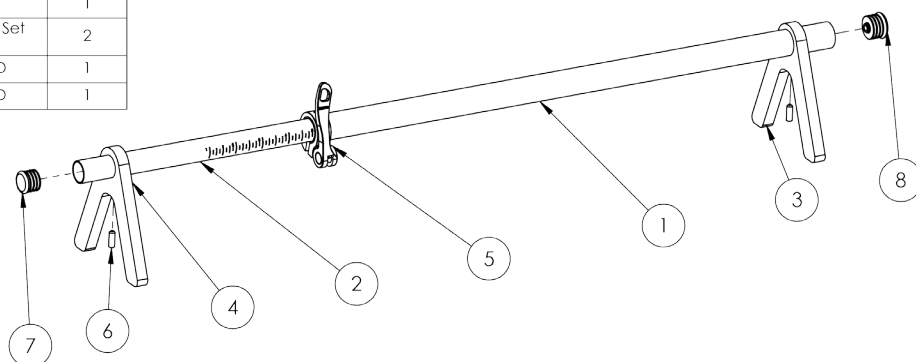


TerraTrike.com | 800.945.9910

**Tools Needed:** 2.5mm allen wrench

### Assembly Instructions:

Wheel Alignment Tool can be used with or without tube supports (3) and (4). To install tube supports, loosen M5 set screws (6) using a 2.5mm allen wrench. Slide Male Tube Support (4) onto Male Aligner Tube (2) and tighten set screw. Repeat the process for the Female Tube Support (3) and Female Aligner Tube (1).

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	TT000910	Wheel Aligner Female Tube	1
2	TT000911	Wheel Aligner Male Tube	1
3	TT000912	Wheel Aligner Female Tube Support	1
4	TT000913	Wheel Aligner Male Tube Support	1
5	TT600929	Seat Stay Collar	1
6	WH000039	M5x0.8 X 14mmL Cup Point Set Screw SS	2
7	WH000040	Plug, 18mmID X 19mmOD	1
8	WH000041	Plug, 20mmID X 22mmOD	1

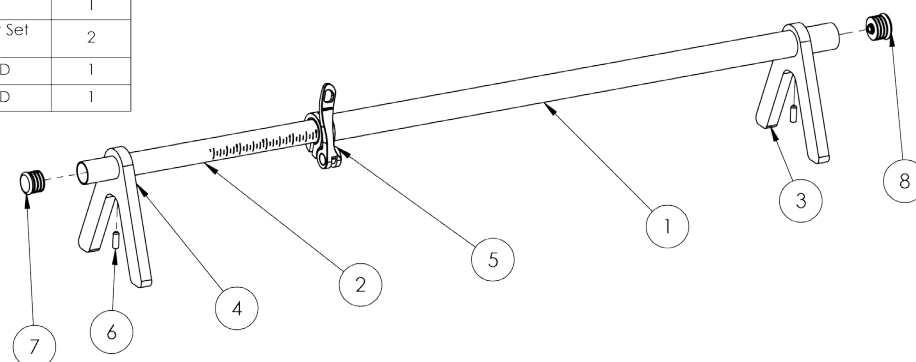

TerraTrike.com | 800.945.9910